

APACS+ and QUADLOG Literature available upon request

4-mation manuals

- Using the ProcessSuite 4-mation Configuration Software Version 4.30 or Higher
- ProcessSuite 4-mation Configuration QUADLOG ACM+/CCM Version 3.30 or Higher
- ProcessSuite 4-mation Configuration QUADLOG I/O Module Configuration Version 3.32 or Higher
- APACS+ AGA Application Library for 4-mation Version 3.00 or Higher
- APACS+TM Advanced Regulatory Control Application Library Version 4.00 or Higher
- ProcessSuite Batch Basic Process Cell Application Library for 4-Mation Version 4.00 or Higher
- APACS+ Industrial Boiler Application Library for 4-mation Version 3.00
- APACS+ 4-mation Ladder Logic Version 4.20 and Higher
- APACS+ 4-mation Sequential Function Chart Version 4.20 or Higher
- APACS+ 4-mation Structured Text Version 4.20 or Higher
- APACS+ Using 4-mation Version 4.20 or Higher with the Satellite Control Module
- APACS+ Paper Stock Refiner Control Application Package for Use with 4-mation Version 4.0 or Higher
- APACS+ Basic Application Library for Version 4.0 and Higher

Controllers

- APACS+ Advanced Control Module (ACM) Standard Function Blocks Version 4.40 and Higher
- APACS+ Advanced Control Module (ACM) Standard Function Blocks Version 4.40 or Higher Addendum: MOVE Function Blocks
- APACS+ Advanced Control Module Plus (ACM+)
- APACS+ eXcelerated Advanced Control Module Plus (ACMx)
- APACS+ Satellite Control Module (SCM)
- QUADLOG eXcelerated Critical Control Module (CCMx)

I/O

- APACS+ I/O Module Configuration for Version 4.40 or Higher
- APACS+ Enhanced Analog Module (EAM)
- APACS+ HART Fieldbus Module (HFM)
- APACS+ Input Discrete Module (IDM)
- APACS+ Isolated Discrete Output (IDO-DC) Module 24 to 125 VDC
- APACS+ PROFIBUS Fieldbus Module (PFM)
- APACS+ Resistance Temperature Module (RTM)
- APACS+ Standard Analog Module (SAM)
- APACS+ Standard Discrete Module Plus (SDM+)
- APACS+ Voltage Input Module (VIM)
- APACS+ and QUADLOG Remote I/O Rack Installation and Service
- QUADLOG Output Discrete Module (ODM)
- QUADLOG Standard Discrete Module (SDM)
- VIM (Voltage Input Module) Installation and Service Instruction
- Installation and Service Instruction APACS+ SAM Modular Marshalled Termination Assembly (MMTA)
- APACS+ Standard Analog Input (SAI) Module
- APACS+ IOBUS Fiber Optic Expander (IFX) Installation and Service Instruction
- APACS+ Isolated Discrete Output (IDO-DC) Module 24 to 125 VDC Version SD39IDO-1

QUADLOG Manuals

- QUADLOG Critical Analog Module
- QUADLOG Critical Discrete Module (CDM)
- APACS+ / QUADLOG SDM RELAY MARSHALLED TERMINATION ASSEMBLY (RMTA)
- Modbus Slave Function Block Library for APACS Version 4.00 or Higher QUADLOG Version 3.00 or Higher
- QUADLOG STANDARD ANALOG MODULE (SAM)
- Safety Manual for QUADLOG Version 3.32 or Higher
- Fail Safe Communications (FSC) Function Block Library for APACS+ Version 4.42 or Higher and QUADLOG Version 3.40 or Higher
- QUADLOG Critical Analog Input Module (CAI)
- QUADLOG Critical Control Module Plus (CCM+)
- QUADLOG Enhanced Analog Module (EAM)
- QUADLOG Resistance Temperature Module (RTM)
- QUADLOG Standard Discrete Module (SDM)
- QUADLOG® Input Discrete Module (IDM) SDQLIDM-1
- QUADLOG® Output Discrete Module (ODM)
- QUADLOG® Critical Discrete Output (CDO-DC)

Network

- Industrial Ethernet Module (IEM)
 - APACS+ Network Interface Manager
 - APACS+/QUADLOG IOBUS Fiber-optic Interface (IFI) Installation and Service Instruction
 - APACS+ M-BUS/M-NET Interface Installation for Windows 2000 and NT Personal Computers
 - MODULNET Carrierband Network
 - APACS+ BUS Continuation Module (BCM)
 - APACS+ BUS Diverter Module (BDM) Installation and Service Instruction
 - Rack-mounted Industrial Computer (RCI) Installation and Service Instruction
 - Rack-mounted Network Interface (RNI) Installation and Service Instruction
 - Network Interface Manager (NIM) Software Version 3.00 or Higher
-